

* ORIGINAL *

9/02


Global Series Dishwasher

FROM MARCH 03

OPERATING INSTRUCTIONS

A SERIES

Dx 300	Dx 310
450	460
500	510

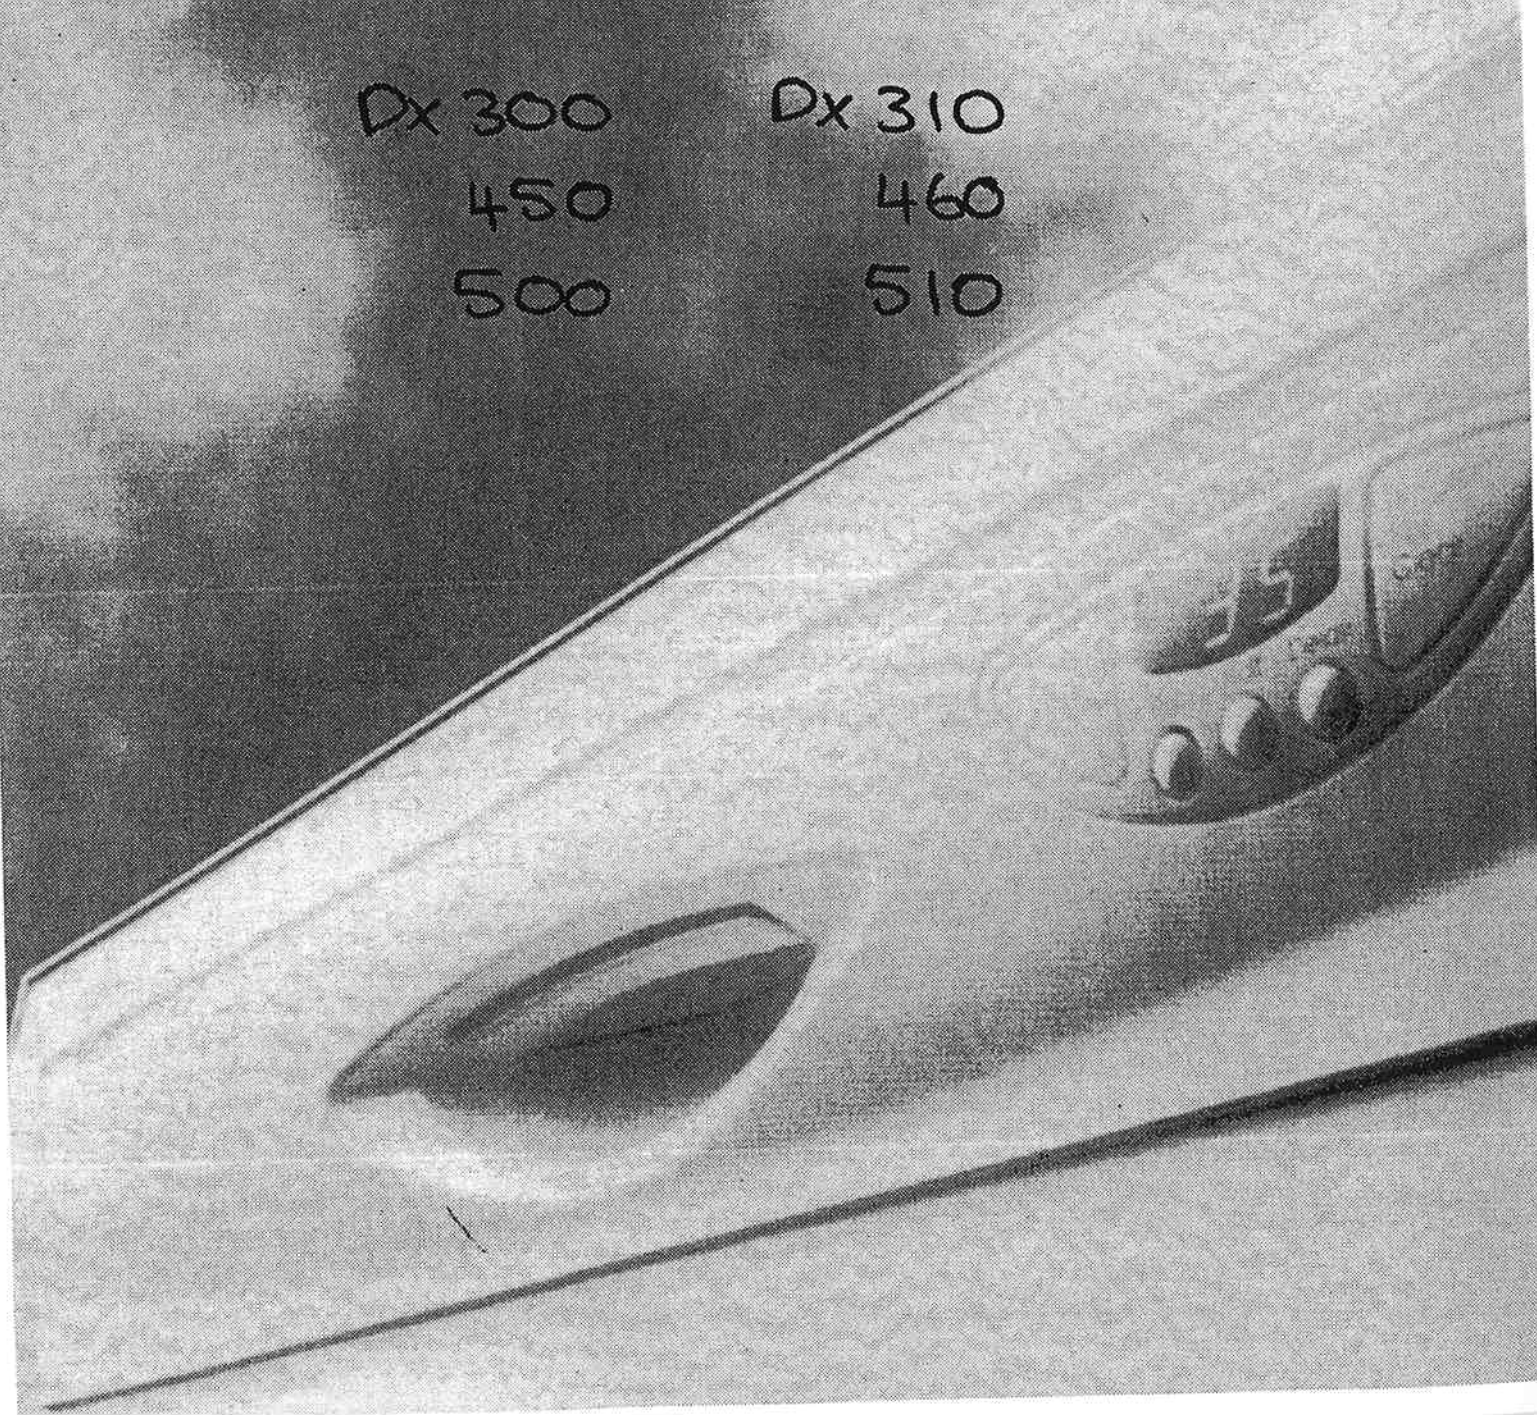

Index

Loading your dishwasher	3
Detergent & rinse aid	6
Selecting programs	8
Selecting options	9
Wash programs	10
Cleaning and care	11
Problem solver	13
Handy hints	15
INSTALLATION INSTRUCTIONS	16
Installer's final check list	21
Warranty (Australia)	24
Warranty (New Zealand)	27
Who to contact for service	28

*** FOR WATER LEVEL
FILL ADJUSTMENT
SEE PAGES 21 & 22**

Quick start

This is a quick guide to prompt you in the use of your new dishwasher right away;

Complete 'BEFORE USE' section below

Open door.

Load dishes.

Check spray arms can rotate.

Add detergent and rinse aid.

Close door.

Select program.

Select options.

Press start.

We do urge you to read this manual thoroughly when you have more time so that you can take full advantage of all your dishwasher features.

Please retain this Operating Instruction for the life of the dishwasher.

BEFORE USE

Please check the following prior to using your new dishwasher:-

- Installer has connected the dishwasher to your choice of hot and/or cold water and the tap/s turned on.
- Installer has fitted correct plumbing as outlined in the Installation Instructions.
- Installer has filled out the declaration on the back page of this booklet.
- The installer has checked all connections and tested the machine.
- The power cord is plugged in and the switch is on.
- The drain hose is connected.

The dishwasher must be installed in accordance with the Installation Instructions. The manufacturer will not be liable for any damage to the machine or property caused by failure related to incorrect installation.


This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with this appliance.

Loading Your Dishwasher

For the best washing performance it is important that the dishwasher is loaded according to the instructions contained in this section. Before loading items into the dishwasher you must scrape off large particles in particular non soluble items such as bones, toothpicks, pips etc. It is not necessary to rinse the dishes.

When loading the dishwasher, observe the following general guidelines:


- Position crockery such that water will contact all surfaces.
- Deep based items should be placed at an angle to help water run off and dry properly.
- Dishwasher safe plastic items should be positioned in the top basket away from the heating element.
- Items with burnt on scraps should be soaked prior to loading in the dishwasher.

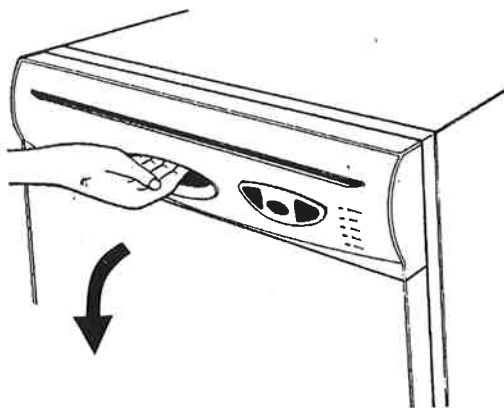

Loading the Lower Basket


The lower basket is best loaded with dinner plates, soup bowls, dishes, pots, pans, lids and even the griller tray. Plates should always be positioned upright (vertical) and facing the centre of the basket. Pots, pans and large dishes must be turned upside-down.

Slide the basket out and stack items as shown.

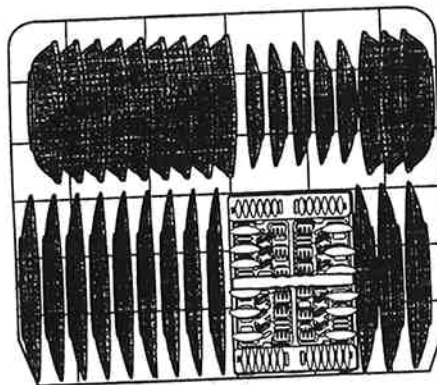


Take care not to obstruct the rotation of the spray arms, and that larger items do not prevent the detergent dispenser lid from opening.

Ensure dishes do not prevent detergent dispenser lid from opening

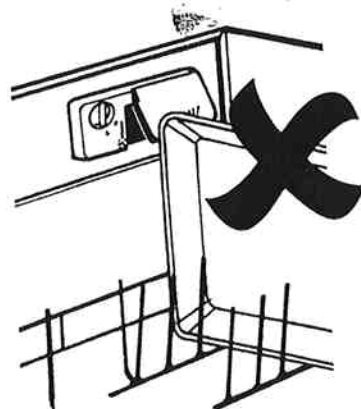

Using the Fold Down Racks (Some Models)

Your model may be fitted with fold down inserts. These can be lowered towards the centre to allow room for larger items. Alternatively, some models may be fitted with removable dishracks which can be removed to accommodate larger items.

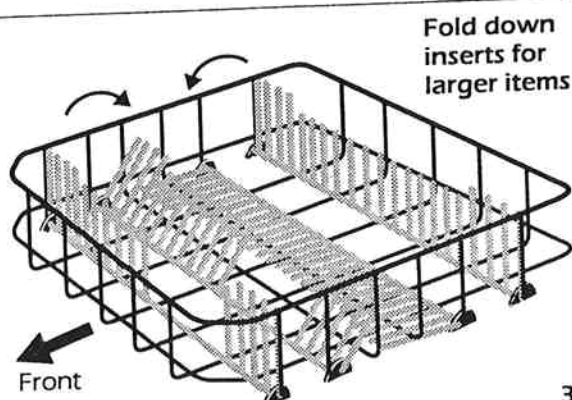


Fold down inserts for larger items

Using the Cutlery Basket

Cutlery should be mixed within each section of the cutlery basket to prevent nesting of similar items. Insert cutlery with the handles down and place small spoons in the racks provided at both ends of the basket. These racks can be hinged and clipped away from the basket if you choose not to use them.

Some models are provided with flip down covers to restrain small items. Using the slots in these covers to separate cutlery will enhance wash performance. Take care to separate stainless steel from silver items as mixing these metals can stain the silver cutlery. Once loaded check that no item has passed through the base preventing the lower spray arm from spinning.

Items too large or too long for the cutlery basket can be laid flat in the upper basket. **Take care when loading and unloading sharp items.**

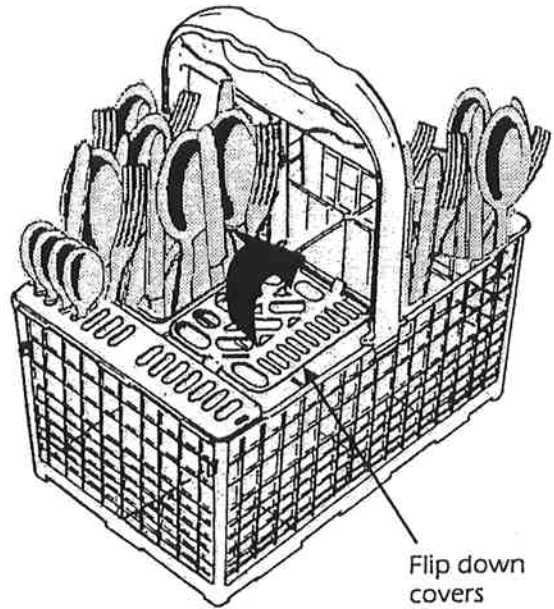


Loading the Upper Basket


The upper basket is best loaded with more delicate items, smaller plates, long cutlery, cups, glasses and dishwasher safe plastic items. Plates should be positioned upwards (vertical) and facing the front of the basket. Cups glasses and bowls must be positioned upside down.

Extra cups or cooking utensils can be laid on the fold down cup racks which may also provide support for long stem glasses.


Your basket may be fitted with an adjustable glass support wire which can be positioned to suit additional tall glasses or folded down to fit larger items over it. Your unit may be fitted with either a five position or a two position glass support wire.

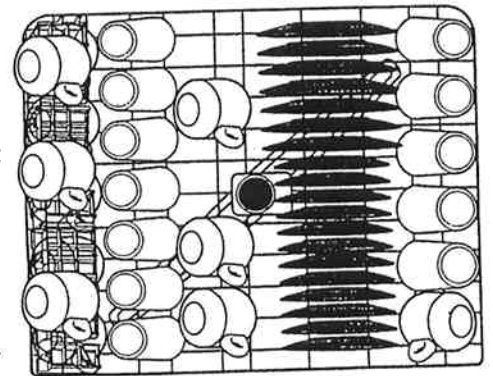


Fold down cup rack can support glass stems

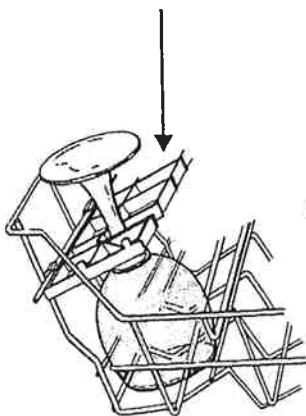

Fold down cup rack can support extra cups

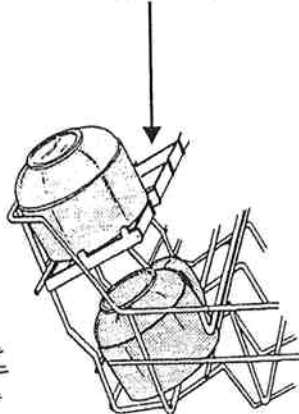

Adjustable glass support wire

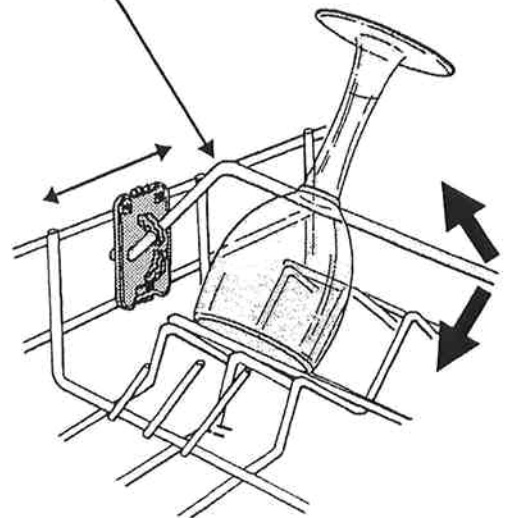


Loading the Upper Basket

Take care not to obstruct the rotation of the spray arm under the upper basket or cover the water collector in the centre of the upper basket.

Please Note



MANUFACTURERS OF PLASTIC "DISHWASHER SAFE" PRODUCTS ADVISE IN THEIR CARE INSTRUCTIONS THAT THESE ITEMS MUST BE WASHED IN THE TOP BASKET OF YOUR DISHWASHER ONLY.

WE FULLY SUPPORT THIS RECOMMENDATION AND ADVISE THAT ALL PLASTIC ITEMS MUST ONLY BE WASHED IN THE TOP BASKET.

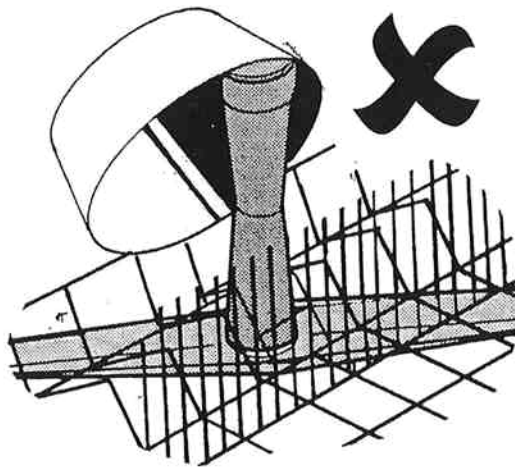

Adjusting the Upper Basket

Your upper basket can be raised or lowered to cater for different size crockery. Ensure basket is empty of all crockery. Remove the rail pegs in the front of the basket runners by squeezing and lifting the top of the peg, then slide the basket out. Re-insert the basket in the chosen position and replace the pegs. Fitting the basket back into the standard position reduces the space between the upper and lower basket. Check that the spray arm is free to rotate.

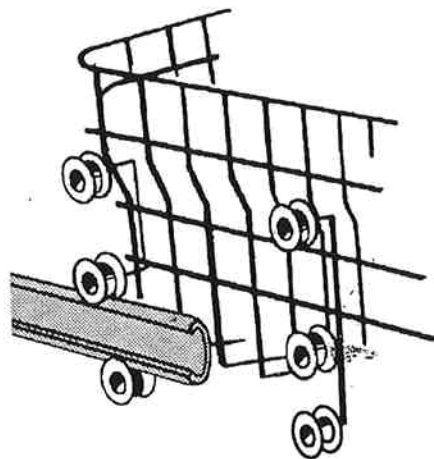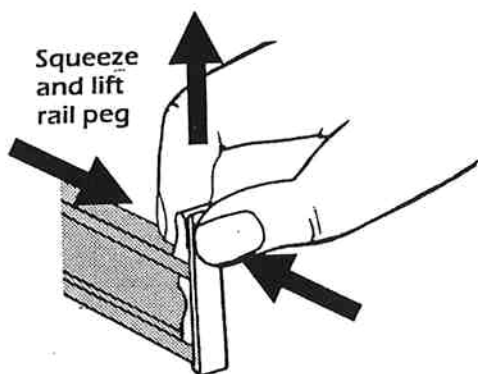

Non Dishwasher Safe Items

The combination of high water temperatures and dishwasher detergent may damage particular items therefore we do not recommend using the dishwasher to wash the following:

- Copper or anodised aluminium.
- Hand painted silver or gold leaf crockery.
- Crystal glasses, bowls or vases.
- Wood or bone handled utensils.
- Iron or non rust proof utensils.
- Plastic items which are not dishwasher safe. Check the manufacturer's instructions to ensure that plastic items will not deform or change colour with heat. See 'Loading the Upper Basket' for recommendation on dishwasher safe plastics.